

# Assembly Instructions for Plus Kit

## List of Parts Included with Your Backdrop:



**Note:** These are optional pieces of hardware you can use to attach your fabric backdrop to an existing trade show booth. You can either connect the clamp near the top of the Uprights on both sides of your booth, or insert the Valance Hangers into the slots of each Upright. Then insert the hooks on each end of your Quickfold Support into the slots on the clamp or Valance Hangers.


### 1 Step One

Plan a location for your Exhibit Plus Kit. Remove the Cross Base (b) and 6" Pin (a) from your box.



### 2 Step Two

Unscrew the screw from the bottom of the Pin (a). Open the Cross Base (b) and screw the Pins (a) together as shown.

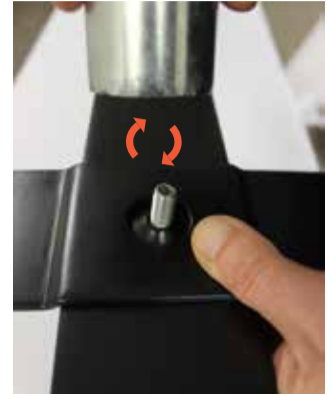

### 3 Step Three

Remove the Quickfold Support (d) from the box. Open the Quickfold Support to its full extended length and place it on the ground where you are setting up your Exhibit Backdrop Kit.



### 4 Step Four

Move the Cross Bases (b) to both ends of the Quickfold Support (d). The length of the assembled Quickfold Support will then act as a measurement guide for the width of your Backdrop.



### 5 Step Five

Assemble your Quickfold Uprights by unfolding them and connecting the pieces together.



### 6 Step Six

Place your Quickfold Uprights (c) on the assembled Cross Bases (b).



### 7 Step Seven

Remove your Printed Backdrop from the carrying case and unfold it. Insert the Quickfold Support (d) into the top pocket of your Backdrop.



### 8 Step Eight

Insert the hook on one end of the Quickfold Support (d) into the slot on one of the Quickfold Uprights (c) and repeat for the other side. (Tip: Angle your Quickfold Upright (c) to easily access the second slot.)



### 9 Step Nine

Place your Upright back on the Pin and make sure the backdrop is stable.



### 10 Step Ten

Adjust your Custom Exhibit Backdrop until it is flat and smooth.

